



ZYCOO[®] ZX50 SERIES IPPBX USER MANUAL

V3.0

The information contained in this document is subject to change at any time without prior notification. If you want to learn more info about our product, please visit our web www.zycoo.com.

TABLE OF CONTENTS

Chapter1	Safety Notice	3
Chapter2	Brief Introduction	4
2.1	Brief introduction of ZX50	4
2.2	Hardware Structure	5
2.2.1	Back Panel.....	5
2.2.2	Front Panel	5
2.2.3	Hardware:	6
2.2.4	Environmental Requirements:	6
2.2.5	Packing List	6
Chapter3	Basic Configuration	7
3.1	Preparation Before Operation.....	7
3.2	Before Making a Call	7
3.2.1	Login IP PBX	7
3.2.2	Basic Configuration	9
3.2.3	Time Based Rules	11
3.3	Outbound Call.....	11
3.3.1	Trunks.....	11
3.3.4	Outbound Routes	14
3.4	Inbound Call.....	15
3.4.1	Inbound Routes.....	15
3.4.2	IVR	17
3.4.3	IVR Prompts	17
3.4.4	Ring Groups	18
3.5	Black List.....	19
3.5.1	Pickup Call.....	19
3.6	On The Call.....	20
3.6.1	Call Parking	20
3.6.2	Transfer	21
3.6.3	Conference	21
3.6.4	Monitor	23
3.7	Settings before leaving office	24
3.7.1	Follow Me.....	24
3.7.2	VoiceMail.....	25
3.8	Call Queue	27
3.8.1	Create Agent	27
3.8.2	Agent Registration.....	29
3.8.3	Agent Log Off	30
Chapter 4	Advanced.....	31
4.1	Options.....	31
4.2	VoiceMail.....	32
4.3	Music Settings	35
4.4	DISA.....	36
4.5	Paging And Intercom	37

4.6	Monitor	37
4.7	Phone Book.....	38
4.8	Feature Codes.....	39
Chapter 5	Status	42
5.1	Record List	42
5.2	Call Logs	42
5.3	Register Status	43
5.4	System Info	43
Chapter 6	System	46
6.1	Network And Country	46
6.2	TroubleShooting	46
6.3	DDNS & VPN	47
6.4	Time Settings.....	48
6.5	Management	49
6.6	Data Storage	50
6.7	Backup	50
6.8	Update.....	51
Chapter 7	Operating Instruction	53
7.1	How to connect the ZX50 IP PBX to the Internet.....	53
7.1.1	IP PBX behind the Router	53
7.1.2	IP PBX behind the Modem.....	53
7.2	How to combine two ZX50 IP PBX in the same network	54
7.3	How to combine two IPPBX in different network	57
7.4	How to resolve problems about hearing on one side only	59
Chapter8	How to use Skype account in ZX50.....	61

Chapter1 Safety Notice

Please read the following safety notices before installing or using this IP PBX. They are crucial for a safe and reliable operation of the device.

- Please use the external power supply which is included in the package. Other power supplies may cause damage to the device, affect the performance or induce noise.
- Before using the external power supply in the package, please check with residential power voltage. Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it, otherwise, it may cause fire or electric shock.
- The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not install the device in places where there is direct sunlight. Also do not place the device on carpets or cushions. It may cause fire or breakdown.
- Avoid exposing the device to high temperature, below -10°C or high humidity. Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling to the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock or breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug or phone line, it may cause an electric shock.
- Do not install this device in an ill-ventilated place.
- You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazard involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Chapter2 Brief Introduction

2.1 Brief introduction of ZX50

The all-in-one ZX50 IP PBX can not only provide the traditional basic PBX features(call hold, call forwarding, call waiting and so on), but also provide enhanced features such as visual operator, voice mail to mail, multi-media music on hold, and auto attendant, etc. In addition, it's very convenient for SMEs' management and maintenance, also easy to upgrade. SMEs can set up own phone system to improve the company image and office efficiency.

ZX50 series IP PBX includes: ZX50-A4, ZX50-A8, ZX50-AG42, ZX50-G4, ZX50-AE41, ZX50-B4, most of their features and structure are same, main difference is the interface, please check the following table for details:

	Model	FXS	FXO	GSM	E1	BRI
ZX50-A4	A404		4			
	A422	2	2			
ZX50-A8	A808		8			
	A826	2	6			
ZX50-AG42	AG4204		4	2		
	AG4222	2	2	2		
ZX50-G4	G4			4		
ZX50-AE41	AE4104		4		1	
	AE4122	2	2		1	
ZX50-B4	B4					4

Main Features

- 30 Concurrent calls/ Up to 100 registers
- Video Calls
- Multiple Language
- DID(Direct Inward Dialing Number)
- Support SKYPE for SIP
- Support USB disk recording(Scalable)
- Call Monitoring
- Codec: G.711-Ulaw,G.711-Alaw,G.726,G.729
GSM,SPEEX,H.261,H.263,H.263+,H.264
- Caller ID/ Call Hold/ Forward/ Transfer/ Waiting/ Parking
- Call Paging and Intercom
- Call Queue
- Black List/ Phone Book
- Music On Hold
- DISA(Direct Inward System Access)
- Flexible Dial Plan

- Ring Group/ Conference Room
- Call Logs
- BLF(Busy Lamp Field)
- Configuration By web
- Built-in SIP/IAX2 server
- Build-in voice mail server
- System Backup and Restore
- Echo Cancelation/VAD
- Support Static/DHCP/PPPOE
- VPN Client(Support N2N)
- DDNS Client(Support Dyndns.org)
- Support NTP(Network Time Protocol)

2.2 Hardware Structure

Here, we take ZX50-G4 as the sample to show the interface and the indicators at the front and back panel.

2.2.1 Back Panel



- 4 GSM Antennas
- 2 Network Interface (RJ45)
- 1 Power Interface (DC 12V 2A)
- 1 Reboot Button

2.2.2 Front Panel



Mark	Function	Status	Description
PWR	Power Status	On	Power On
		Off	Power Off
SYS	System Status	On	System working
		Off	System Failed
WAN	WAN interface Status	Wink	Data exchanging
		Off	No Data exchanging
LAN	LAN Interface Status	Wink	Data exchanging
		Off	No Data exchanging
G1~G4	GSM Modules Status	Red	GSM channel
		Off	Failed
*1-4	Analog Modules Status	Green	FXS channels
		Red	FXO channels
		Off	Failed

2.2.3 Hardware:

- 32bit embedded RISC DSP
- 1G Onboard Nand Flash
- 128M Onboard SDRAM

2.2.4 Environmental Requirements:

- temperature: -10 °C -45 °C
- Storage temperature: -30 °C -65 °C
- humidity: 10-80% no dew
- Power: AC 100~240V

2.2.5 Packing List

- | | |
|---|---------|
| ● ZX50 IP PBX | 1 Unit |
| ● GSM Antennas | 4 Units |
| ● Power Adapter | 1 Unit |
| ● CD (Quick Start Guide/ User Manual/ Pictures) | 1 Piece |
| ● Product Maintenance Card | 1 Piece |

Chapter3 Basic Configuration

3.1 Preparation Before Operation

What kind of IP Phone can be used with ZX50 IP PBX?

FXS Interface

- Analog Phone(normal phone like TCL)

SIP Extension

- ZP Series IP Phones provided by ZYCOO(ZP302/ ZP502/ ZP502P)
- IP Phone which support SIP/ IAX2 protocol (eg: CISCO, Grandstream, etc.)

3.2 Before Making a Call

3.2.1 Login IP PBX

Getting IP Address

ZX50 IP PBX support 3 Ways to get the IP Address: Static/ DHCP/ PPPoE

Default IP And Port of WAN&LAN:

- WAN Port IP: <http://192.168.1.100:9999>
- LAN Port IP: <http://192.168.10.100:9999>
- LAN Supper IP: 169.254.1.254/255.255.0.0

Default configuration and function key

- Web GUI username: admin
- Web GUI password: admin
- **11 Play the IP Address of WAN port
- **12 Play the IP Address of LAN port
- 600 Enter into the Voicemail Box
- 900 Enter into the Meeting
- # Blind Transfer
- *2 Attended Transfer
- * Disconnect Call

Login to the system

After connecting the IP PBX to the local area network, launch the web browser on a computer which is in this local area network. Enter the IP address of the system (WAN port IP address **<http://192.168.1.100:9999>**, LAN port IP address **<http://192.168.10.100:9999>**). The start web page will appear like this:



ZYCOO

Username:

Password:

Language: English

[Login](#)

Please login...



Enter Username and password (default username is **admin**, password is **admin**), then click “login”. Once the login is successful, the home page will be displayed:



Note:

- 1) you have to add a network segment same with the WAN port if your PC is not at 192.168.1.XXX.
- 2) For safety requirement, please modify the username and password after you login. You can modify in this page: “System”---“Management”
- 3) Generally, based on the default setting, if user didn't do anything in 1 min after login, system will reflect it's over time. If you want to continue operating, please login again.

If username and password are right, this following page will be displayed:

- **Network** WAN/ LAN Port IP will be displayed
- **Storage** Total storage and used storage will be displayed
- **Channels** Channel information will be based on the product model
- **Device Info** Product Model and System Version will be displayed

Common Button

Besides of the device info in the home page, the following common buttons are displayed as well:

- [Log out](#) Log out GUI
- [Reboot](#) Reboot the IP PBX system
- [Factory Defaults](#) Restore all settings to factory default
- [Activate Changes](#) Activate the changes for your current configuration

System Menu

System Menu include the following sub menu:

- [Home Page](#) Display device info
- [Basic](#) Basic configuration on extension, trunks, etc
- [Inbound Control](#) Configure Inbound Route, IVR and Black List, etc
- [Advanced](#) Configure extension's default info, conference, etc.
- [Status](#) Check record list, call logs, register status, etc here.
- [System](#) Configure network, time, etc; manage call logs, back up files, etc

3.2.2 Basic Configuration

Configure Extensions

Zycoo IP PBX support SIP/IAX2 and analog extension, configure extension from this page: **【Basic】** ---- **【Extensions】**

Extension Settings

Item	Explanation
Search	Search extension precisely or fuzzily
Show all	Show all extensions

Extension	Be connected to the phone eg: "888"
Name	Extension name (English letter is supported only) eg: "Tom"
Password	Password of SIP/IAX2 extension eg: "12u3b6"
Caller ID	Caller's ID eg: "801"
Outbound CID	Overrides the caller id when dialing out with a trunk.
VM Password	Voicemail Password for this user, eg: "1234".
E-mail	The e-mail address for this user, eg. "Tom@gmail.com"
Analog Phone	If this user is attached to an analog port on the system, please choose the port number here.
Dial Plan	Please choose the Dial Plan for this user, Dial Plan is defined under the "Outbound Routes".
Voicemail	This user will have a voicemail account after choosing this option.
Can reinvite	Set up calls directly between caller and receiver, after being connected by IP PBX system. This method is known to cause problems with certain hardware, such as the common Cisco ATA 186.
SIP	Check this option if the User or Phone is using SIP or is a SIP device.
IAX2	Check this option if the User or Phone is using IAX2 or is an IAX2 device.
T.38 Fax	Enables T.38 fax (UDPTL) pass through on SIP to SIP calls
Agent	Check this option if this User or Phone is an Call Agent.
NAT	Check this option if the User or Phone is located behind a NAT (Network Address Translation) enabled gateway.
Pickup Group	Select your pickup group.
Delete VMail	Voicemail will not be checkable by phone if you choose this option. Messages will be sent by email only. Note: You must configure SMTP server for this functionality.
DTMF Mode	The Dual-Tone Multi-Frequency mode to be used is specified here and can be changed if necessary. The default is rfc2833.
Video Call	Enable/Disable Video call for this extension
Permit IP	IP address and network restriction. eg: "192.168.1.77" or "192.168.10.0/255.255.255.0"
Codecs Configure	The allowed and disallowed codecs can be selected by clicking this link. Default codecs are alaw, ulaw and G.729.

**Note:**

- 1) There are 30 default extensions which number started with "8", you can add or delete extension by your requirement.
- 2) As our professional suggestion, extensions don't exceed 100. If extensions were over 100, it will cause the system crashed or other problems.

3.2.3 Time Based Rules

You can set working time rule and after-working time rule, and deal with your inbound call based on this time rule. Please set from this page: **【Time Based Rule】** --- **【New Time Rule】** :

New Time Rule
X

Rule Name: (Ex: July4)

Time & Date Conditions

Start Time: : End Time: :
 Start Day: End Day:
 Start Date: End Date:
 Start Month: End Month:

Destination

if time matches:
 if time did not match:

Save
Cancel

New Time Rule:

Item	Explanation
Rule Name	Define the time rule name.
Time & Date Conditions	Set time segment of Month/Date/Week.
Destination	How to deal with the inbound call in different time segment eg: Inbound call will be forward to IVR in working time.

3.3 Outbound Call

3.3.1 Trunks

If you want to set up outbound call to connect to PSTN(Public Switch Telephone Network) or VoIP provider, please configure on this page: **【Basic】** -> **【Trunks】**

Zycoo IP PBX support 3 kinds of trunks: Analog/GSM line, Custom VoIP, Peer.

How to add each trunk:

1) Analog/ GSM Line

Click **【Add a Dial Rule】** -> **【Analog/GSM】**

Item	Explanation
Description	Define description for the trunk.
Lines	Individual lines of the PBX eg: Analog Port #3: The third analog port of the PBX.

You can configure the Analog/GSM line through ZYCOO IP PBX. Same Analog line couldn't be used in multi trunks. If you don't have available Analog/GSM trunk, you can't set up trunk.

2) Custom VoIP

Custom VoIP allows you to create a VoIP trunk, please configure on this page: **【Add a Trunk】** -> **【VoIP Trunk】**

Add a Trunk
X

Provider Type:

☐ Analog/GSM

☒ VoIP Trunk

☐ Peer

Description:

Protocol: SIP ▼

Dial Plan: default ▼

Register: ☐

Host:

Outboundproxy:

Proxy Port:

☐ Without Authentication

Username:

Password:

Save
Cancel

Item	Explanation
Description	Description for VoIP Trunk, digit or letter is allowed.
Protocol	Choose protocol for this trunk, SIP or IAX2
Dial Plan	Choose a dial plan for this trunk, define it in the submenu named 【Outbound Routes】 .
Register	Check for opening register service; otherwise register service is closed
Host	Host Address provided by VoIP Provider.
Outbound proxy	Outbound proxy is provided by VoIP Provider.
Proxy Port	Proxy Port is provided by VoIP Provider.
Without Authentication	If you don't use Authentication when connecting server, pls check this option.
Username	Username provided by VoIP Provider.
Password	Password provided by VoIP Provider.

3) Peer

ZYCOO IP PBX will be taken as a Client when you use "Peer", it's used for outbound call by connecting to another ZX50 IP PBX.

Add a Trunk X

Provider Type:

- ☐ Analog/GSM
- ☐ VoIP Trunk
- ☒ Peer

Peer Name:

Protocol: SIP

Dial Plan: default

Host: dynamic

NAT: ☐

☐ Without Authentication

Username:

Password:

Item	Explanation
Peer Name	Define the Peer Name, digit or letter is allowed.
Protocol	Choose protocol for this trunk, SIP or IAX2
Dial Plan	Choose a dial plan for this trunk, define it in the submenu named 【Outbound Routes】 .
Host	IP Address of the other ZX50 IP PBX
NAT	Check this option, extension user will be configured after NAT (Network Address Translation).
Without Authentication	If you don't use Authentication when connecting server, pls check this option.
Username	Username provided by the other ZX50 IP PBX.
Password	Password provided by the other ZX50 IP PBX.

Once A trunk is added, this trunk will be displayed in the "List of Trunk". You can define the codecs, configure advanced settings or delete this trunk from the drop downs of "Option"

3.3.4 Outbound Routes

Outbound Routes is to define what trunk is used for outbound call by extension user. If you don't allow extension user call out, please ignore this part.

Please configure on this page: **【Basic】** -> **【Outbound Routes】**

Zycoo

Home

Basic

Extensions

Trunks

Outbound Routes

Inbound Control

Advanced

Status

System

Outbound Routes

List of DialPlans:

DialPlan1
New
Delete

List of DialRules: Add a Dial Rule

S.No	Rule Name	Dial Pattern	Call Using	Options
1	Call_PSTN	Begins with 9 and followed by more than 3 digits	Ports 1,2	Edit Delete

On this page, you can configure basic match pattern of outbound routes and create different dial plan. Please configure by clicking **【Add a Dial Rule】**

Item	Explanation
Rule Name	Set a name for this dial rule
Place this call through	Choose a trunk for this rule
Failover	Choose a failover trunk for using when the above chosen trunk is not available.
PIN Set	Set PIN which you need input when you dial out by this rule.
Dialing Rules	Define the number match pattern for dialing.
Define a custom pattern	N digit from 2 to 9 Z digit from 1 to 9 X digit from 0 to 9 . One digit or multi digits
Delete[]digits prefix	If deleted one digit prefix, when dial 12345, digit 2345 will be sent.
Auto-add digit[]	If added digit"1", when dial 12345, digit 123451 will be sent.

3.4 Inbound Call

3.4.1 Inbound Routes

When a call from outside, you want to forward this call to an extension or IVR, this Chapter will introduce you how to deal with the inbound calls.

Please configure on this page: **【Inbound Routes】**

The screenshot shows the ZYCOO web interface. On the left is a navigation menu with options like Home, Basic, Inbound Control, Inbound Routes, IVR, IVR Prompts, Ring Groups, Black List, Time Based Rules, Advanced, Status, and System. The main area has a top bar with 'Activate Changes' and 'Logout' buttons. Below this is a 'Options' section with three tabs: 'General', 'Analog Channel DIDs', and 'VoIP Channel DIDs'. The 'General' tab is selected, displaying two sections: 'From Analog Channels' and 'From VoIP Channels'. Each section contains a 'Destination' dropdown menu, both currently set to 'working time -- IVR'. At the bottom of the 'General' tab are 'Save' and 'Cancel' buttons. A tooltip on the right side says 'Move the mouse over to a field to see tooltips'.

General

When a call from a trunk (Analog/ VoIP), it could be forwarded to an extension, call queue, conference or IVR. You can choose based on your requirement.

Analog Channel DID

If you want to direct the inbound call from a trunk (Analog) to a specified extension, call queue, conference or IVR, please configure on this page: **【Add Analog Channel】**

The 'Add Analog Channel' dialog box has a title bar with 'Add Analog Channel' and a close button 'X'. Inside, there are two labels with corresponding dropdown menus: 'Channel:' and 'DID Extension:'. Below these are 'Save' and 'Cancel' buttons.

- Channel Choose Analog Port of trunk
- DID Extension Select Extension, call queue, conference or IVR for DID.

VoIP Channel DID

If you want to direct the inbound call from a VoIP trunk to a specified extension, call queue, conference or IVR, please configure on this page: **【Add VoIP Channel】**

The 'Add VoIP Channel' dialog box has a title bar with 'Add VoIP Channel' and a close button 'X'. Inside, there are two labels with corresponding input fields: 'DID Number:' and 'DID Extension:'. Below these are 'Save' and 'Cancel' buttons.

- DID Number DID number calling into VoIP (This number is configured in the advance option of VoIP trunk)
- DID Extension Choose a specified extension, call queue, conference or IVR to

be directed to call.

3.4.2 IVR

IVR will improve office efficiency based on your requirement.


Please configure on this page **【IVR】**

Item	Explanation
Name	Set a name for the IVR
Extension	If you want to listen to the IVR by dialing extension, please input an extension Number.
Please Select	Select IVR audio file, please configure in this page: 【IVR Prompts】
Repeat Loops	loop times to repeat playing the IVR prompt.
Dial other Extensions	Allow caller to dial other extension besides of the ones listed as below.
Keypress' Events	Each digit will be related to the actions defined in the blank.

3.4.3 IVR Prompts

Record or play IVR music from extension. Pls configure on this page: **【IVR Prompts】**

Click **【Record a new voice】** to display the diagram as below:

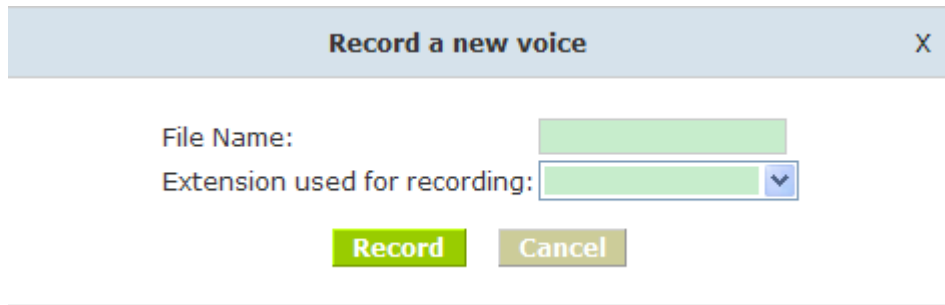

Record a new voice [X]

File Name:

Extension used for recording: [v]


Record **Cancel**

- File name Define a name for the recorded IVR file
- Extension used for recording Select an extension for recording, click **Record** button, the selected extension will ring, then you can record IVR.

3.4.4 Ring Groups

Ring Group is a collection of extensions. When a call to a ring group, all extensions in this ring group will ring in different way based on their different configuration, if ring time exceeded defined time, the call will be directed to IVR or others based on your configuration.

There isn't any data in the factory default **Ring Groups**, please configure as below:
Click **New Ring Group** to display the diagram as below:

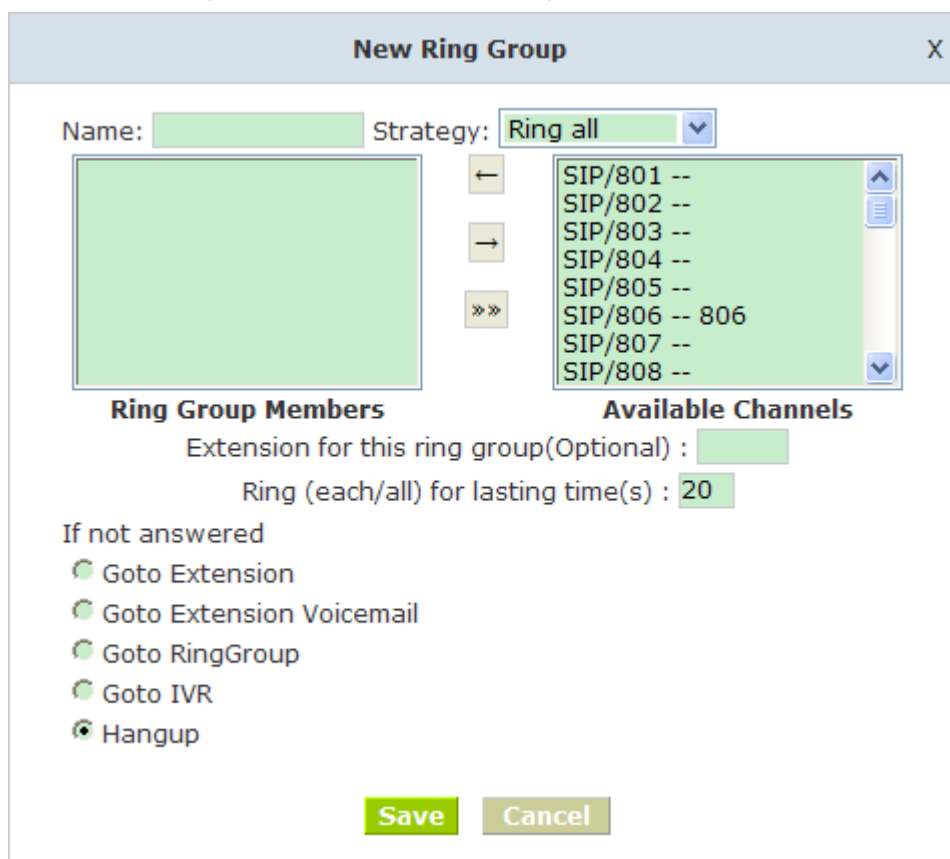

New Ring Group [X]

Name: Strategy: [v]

Ring Group Members

Extension for this ring group(Optional) :

Ring (each/all) for lasting time(s) :

If not answered


- ☐ Goto Extension
- ☐ Goto Extension Voicemail
- ☐ Goto RingGroup
- ☐ Goto IVR
- ☒ Hangup

Available Channels

- SIP/801 --
- SIP/802 --
- SIP/803 --
- SIP/804 --
- SIP/805 --
- SIP/806 -- 806
- SIP/807 --
- SIP/808 --

Save **Cancel**


- Name Define a name for this ring group
- Strategy Select strategy : "Ring all" or "Ring in order"

- Ring Group Members Select ring group members in available channels, click  to add
- If not answered You can choose forward the call to extension, extension, Voicemail, RingGroup, IVR or Hangup.

3.5 Black List

If some numbers need to be blocked, you can use this functionality.


Please configure in **【Black List】**, click **【New Blacklist】** to display this dialog as below:

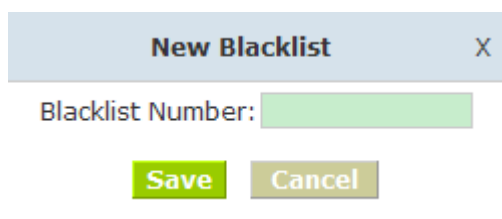

The dialog box titled "New Blacklist" has a close button (X) in the top right corner. It contains a label "Blacklist Number:" followed by a text input field. Below the input field are two buttons: "Save" (green) and "Cancel" (grey).

Input caller's number in the blank, then this caller's number will be blocked when call again. Meanwhile, extension user can add or delete the blacklist number by function key on the phone.

Please operate as the following diagram:

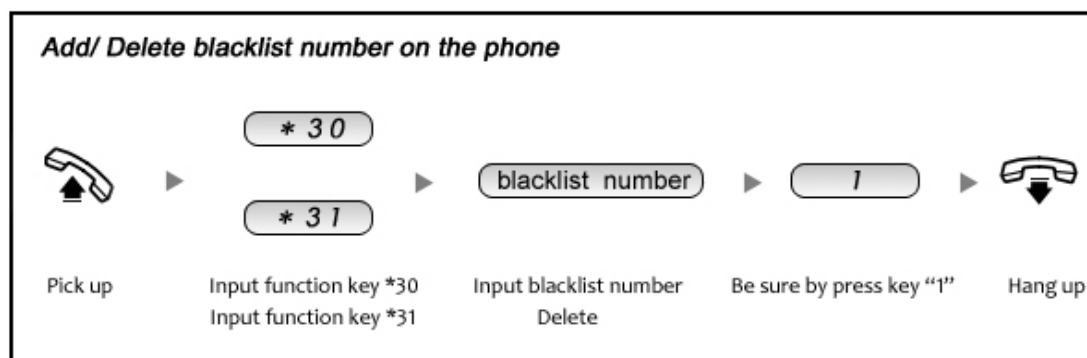


Reference Parameters and Explanation of Blacklist:

Item	Explanation
*30	When the extension user (in the system) input *30 to add a blacklist number, this number will be added to the "Black List"
*31	When the extension user input *31+ blacklist number, this number will be deleted from the "Black List".

3.5.1 Pickup Call

If an extension user is away from his/her desk, other extension users can pickup the call by function key on the phone. Please check the following diagram to learn:

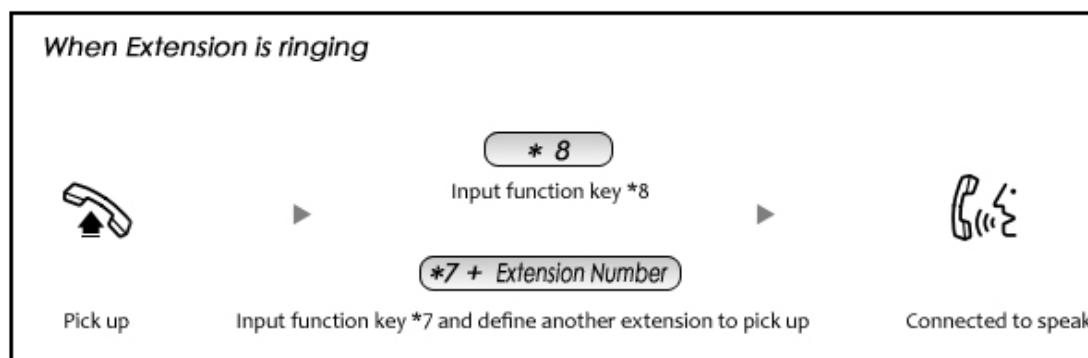


Reference Parameters and Explanation of Pickup Calls

Item	Explanation
*8	Pick up the ringing extension (in the system) at random. This can be defined in 【Feature Codes】
*7	Defined extension number must be inputted after *7. This can be defined in 【Feature Codes】 .

3.6 On The Call

3.6.1 Call Parking

If you picked up a call at your seat, but it's not convenient to talk in public, you need go to the conference room to talk secretly. At this time, you can input 700 to park this call, the system will tell you a parking number 701 which you can input for continuing conversation when you go to the conference room. Please check the diagram as below to learn:

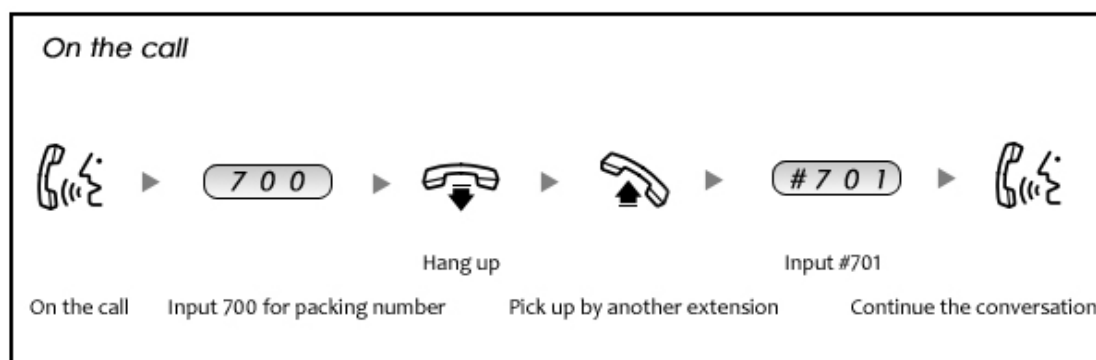


Reference Parameters and Explanation of Call Park:

Item	Explanation
Extension to Dial for Parking Calls:	Default number is 700. It can be defined in 【Feature Codes】
What extension to park calls on	Default number is 701-720.It can be defined in【Feature Codes】
How many seconds a call can	Default is 45 seconds. It can be defined in 【Feature Codes】

be parked for	
---------------	--

3.6.2 Transfer

If an incoming call asked to speak to your colleague, you can transfer the call directly to your colleague or transfer the call after agreed by your colleague. Please check the diagram as below to learn:

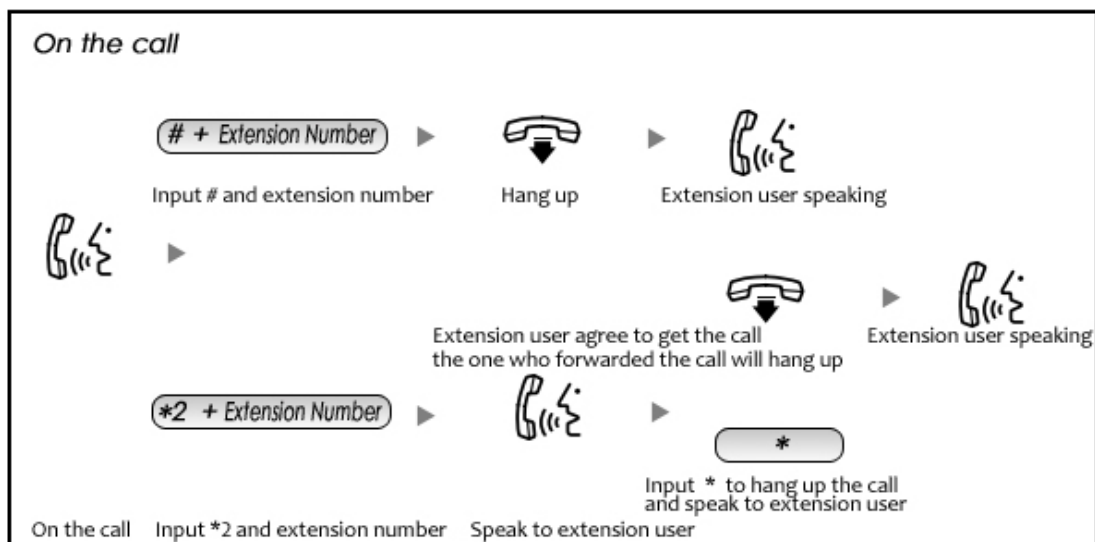

Reference Parameters and Explanation of Transfer:

Item	Explanation
Blind Transfer	Default is #, it can be defined in 【Feature Codes】
Attended Transfer	Default is *2, it can be defined in 【Feature Codes】
Disconnect Call	Default is *, it can be used after you use function key " *2 ". it can be defined in 【Feature Codes】
Timeout for answer on attended transfer	Default is 15 seconds, it can be defined in 【Feature Codes】

3.6.3 Conference


If you wanted to create a conference room for some extension users or with external lines, you can input conference room number 900, input conference room password 1234 (Admin's password is 2345), then enter into conference room. Please configure on this page **【Conference】** :

Conference Number	
Extension:	900
Conference Password	
PIN Code:	1234
Admin PIN Code:	2345
Conference Options	
Conference DialPlan	DialPlan1
<input checked="" type="checkbox"/>	Play hold music for first caller
<input checked="" type="checkbox"/>	Enable caller menu
<input type="checkbox"/>	Announce callers
<input type="checkbox"/>	Record conference
<input type="checkbox"/>	Quiet Mode
<input type="checkbox"/>	Leader Wait
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

Item	Explanation
Conference Number	The number that users call in order to access the conference room, the default number is "900".
PIN Code	Participants enter the conference room by this code.
Admin PIN Code	Administrator enter the conference room by this code.
Conference DialPlan	Use the dialplan when you invite the other participant.
Play hold music for first caller	Check this option, Asterisk will play Hold Music to the first user in a conference, until another user has joined the same conference.
Enable caller menu	Checking this option allows a user to access the Conference Bridge menu by pressing the * key on their dialpad.
Announce callers	Checking this option announces to all Bridge participants, the joining of any other participants.
Record conference	Recording format is WAV.
Quiet Mode	If this option was checked, all users entering this conference will be marked as quiet, and will be in Listen-Only mode.
Leader Wait	Wait until the conference leader (admin user) arrives before starting the conference.


Please check the following diagram to learn:

Go to conference:

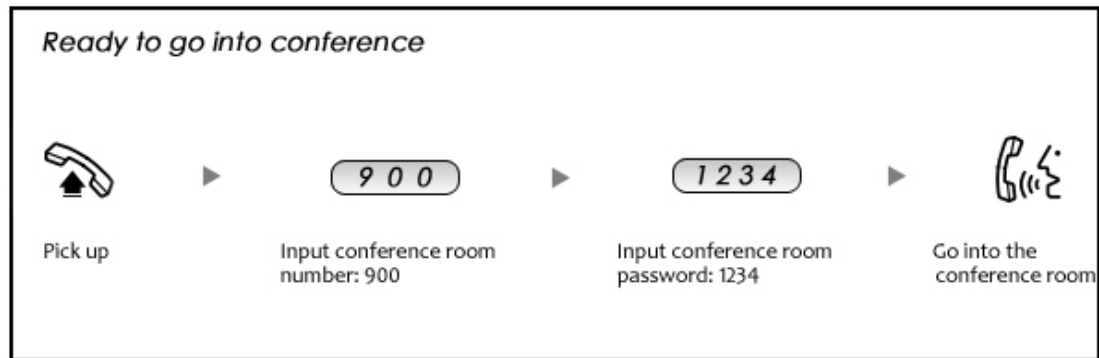

In the conference, admin can add new participant (extension user or external number) into the conference.

Add new participant:

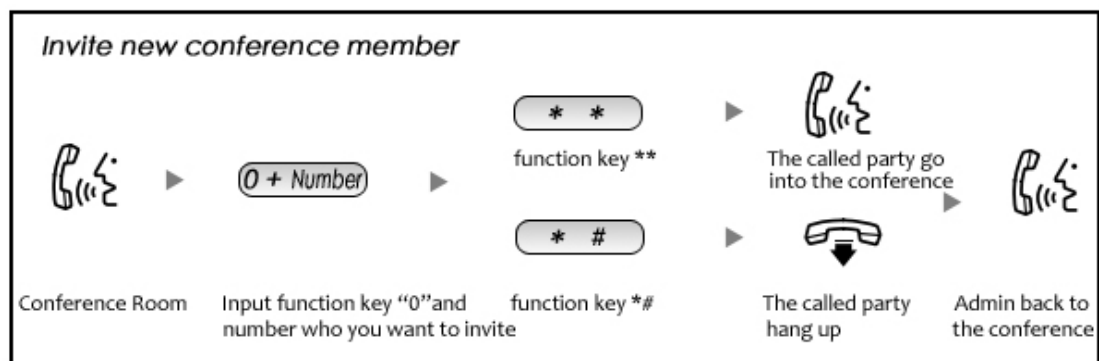

3.6.4 Monitor

Monitor the specified extension, also you can monitor in different time.
Please click **【Monitor】** -- **【New Monitor】** to configure:

New MonitorX

Extension:

Monitoring Time

Always Monitor: ☐

Start Time: : End Time: :

Start Day: End Day:

Monitor Settings

Inbound Record: ☐ Outbound Record: ☐

Item	Explanation
Extension	Select an extension which need to be monitored
Monitoring Time	Always monitor or monitor in different time.
Monitor Settings	Set inbound record and outbound record.

3.7 Settings before leaving office

3.7.1 Follow Me

If you don't want to lose any call, you can use this function.

Please click **【Follow Me】** --- **【New Follow Me】**

New Follow Me X

Extension: 801 ▼

Ring lasting for(s) 20

Status: ☒ Always ☐ Busy ☐ No answer

Set your Follow Me number

☒ Forward to an Internal Extension
 ☐ Forward to an External Number

Set Internal extension 805

Save
Cancel

Item		Explanation
Extension		Choose an extension
Ring lasting for(s)		Default is 20 seconds, you can define it by yourself.
Status	Always	All incoming calls will be forwarded
	Busy	Forward when extension is busy
	No answer	Forward when extension not answer
Set your Follow Me number	Forward to an Internal Extension	Incoming call will be forwarded to internal extension.
	Forward to an External Extension	Incoming call will be forwarded to external number or mobile number.
Set Internal Extension		Set an internal extension to pick up the call.
Select DialPlan		Select DialPlan when forward the call to external number.
Set External Number		Set external number, like Mobile number.

3.7.2 VoiceMail

If you don't want to configure "Follow Me", you can record the message of incoming call, and email the message to your defined mailbox.

Click **【Extension】** --- **【Extension Settings】**

Extension Settings:

Extension:

Name:

Password:

Caller ID:

Outbound CID:

VM Password:

E-mail:

Analog Phone:

None

Dial Plan:

DialPlan1

Advanced Options:

☐ VoiceMail

☐ Can Reinvite

☐ SIP

☐ IAX2

☐ T.38 Fax

☐ Agent

☐ NAT

Pickup Group

1

☐ Delete VMail

DTMF Mode

RFC2833

☐ Video Call

Permit IP

Codecs Configure:

Save

Cancel


Extension Settings:	
Extension:	<input type="text"/>
Name:	<input type="text"/>
Password:	<input type="text"/>
Caller ID:	<input type="text"/>
Outbound CID:	<input type="text"/>
VM Password:	<input type="text"/>
E-mail:	<input type="text"/>
Analog Phone:	<input type="text" value="None"/>
Dial Plan:	<input type="text" value="DialPlan1"/>
Advanced Options:	
<input type="checkbox"/> VoiceMail	<input type="checkbox"/> Can Reinvite
<input type="checkbox"/> SIP	<input type="checkbox"/> IAX2
<input type="checkbox"/> T.38 Fax	<input type="checkbox"/> Agent
<input type="checkbox"/> NAT	Pickup Group <input type="text" value="1"/>
<input type="checkbox"/> Delete VMail	DTMF Mode <input type="text" value="RFC2833"/>
<input type="checkbox"/> Video Call	Permit IP <input type="text"/>
Codecs Configure:	
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

【VoiceMail】 must be opened and 【VM Password】 must be configured before using "VoiceMail". If no answer, when default ring time is over, the system will play and ask you to leave your message, press # to end recording. If you configured email, your voice message will be sent to your defined email.

Leave a message:



Listen to the message

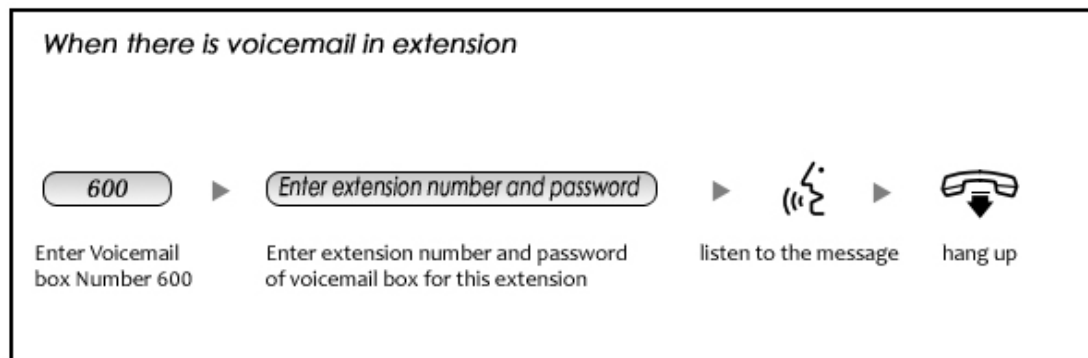

Note:

- 1) If you would like using this function, you must write correct email address in "extension settings"
- 2) You need configure SMTP and Email model in **【VoiceMail】** , please check the details in the following chapter **【VoiceMail】**

3.8 Call Queue

3.8.1 Create Agent

Check agent in the **【Extension Settings】**---**【Advanced Options】** , then assign agent and Ring Strategy in **【Call Queue】** , please learn from the following configuration interface:

Call Queue Reference:

Queue Number: 500

Queue Name: Service

Ring Strategy: Random

Agents:

<input checked="" type="checkbox"/>	802 (802)	↑
<input checked="" type="checkbox"/>	803 (803)	⋮
<input checked="" type="checkbox"/>	804 (804)	↓
<input checked="" type="checkbox"/>	806 (806)	

Item	Explanation
Queue Number	This option defines the extension number that may be dialed to reach this Queue.
Queue Name	This option defines a name for this Queue, eg. "Sales"
Ring Strategy	RingAll -- Ring All available Agents until one answers(default).

	<p>RoundRobin -- Take turns ringing each available Agent.</p> <p>LeastRecent -- Ring the Agent which was called least recently.</p> <p>FewestCalls -- Ring the Agent with the fewest completed calls.</p> <p>Random -- Ring a Random Agent.</p> <p>RRmemory --RoundRobin with Memory, and remember where it left off in the last ring pass.</p>
Agents	<p>All the users who is defined as Agent will be shown here.</p> <p>Selected agent will be a member of the current Queue.</p>

Queue Options:	Announcements:
Agent TimeOut(s): <input type="text" value="15"/> <input type="checkbox"/> Auto Pause Wrap-Up-Time(s): <input type="text" value="10"/> Max Wait Time(s): <input type="text"/> Max Callers: <input type="text" value="8"/> <input type="checkbox"/> Join Empty <input type="checkbox"/> Leave When Empty <input checked="" type="checkbox"/> Auto Fill <input type="checkbox"/> Report Hold Time	Caller Position Announcements Frequency(s): <input type="text" value="30"/> Announce Hold Time: <input type="text" value="no"/> <input type="button" value="v"/> Periodic Announcements Repeat Frequency(s): <input type="text" value="0"/> Announcements Prompt: <input type="text" value="welcome"/> <input type="button" value="v"/>

Note:Each agent needs to login to the queue using the login extension defined in Feature Codes.


Item	Explanation
Agent TimeOut(s)	This option defines the time in seconds that an Agent's phone rings before the next Agent is rung, eg. "15"
Auto Pause	Pause an Agent if they fail to answer a call.
Wrap-Up-Time(s)	After a successful call, how many seconds needed to wait before sending another call to a potentially free agent (Default is 0, which means No Delay).
Max Wait Time(s)	The maximum number of seconds a caller can wait in a queue before being pulled out(empty for unlimited).
Max Callers	This option sets the maximum number of callers that may wait in a Queue(Default is 0, Unlimited).
Join Empty	Defining this option allows callers to enter the Queue when no Agents are available. If this option is not defined, callers will not be able to enter Queues with no available agents.
Leave When Empty	Defining this option forces all callers to exit the Queue if New Callers are also not able to Enter the Queue. This option should generally be set in concert with the "Join Empty"

	option.
Auto Fill	Defining this option causes the Queue, when multiple calls are in it at the same time, to push them to Agents simultaneously. Thus, instead of completing one call to an Agent at a time, the Queue will complete as many calls simultaneously to the available Agents.
Report Hold Time	Check this option if you wish to report the caller's hold time to the agent member before they are connected to the caller.
Frequency(s)	How often to announce queue position and estimated holdtime(0 to Disable Announcements).
Announce Hold Time	Should we include estimated hold time in position announcements? Either yes, no, or only once; hold time will not be announced if <1 minute.
Repeat Frequency(s)	How often to announce a voice menu to the caller(0 to Disable Announcements).
Announcements Prompt	Select the 'Announcements Prompt' from IVR Prompts


3.8.2 Agent Registration

You need register for using after creating agents.

Agent Registration when hook off

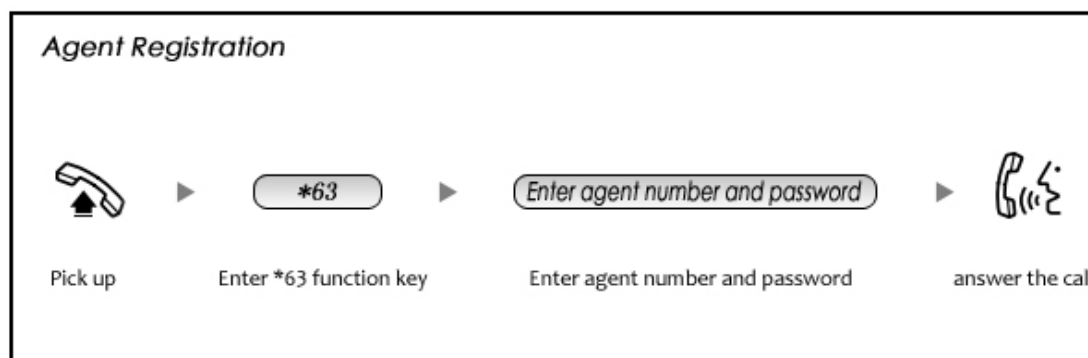


Agent Registration when hook on

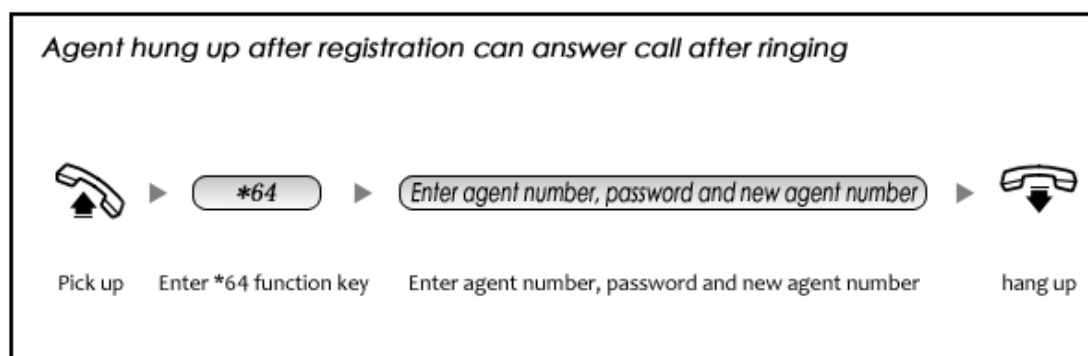

3.8.3 Agent Log Off

If agent would leave and log off, none of agent will answer calls then.

Agent Log Off:

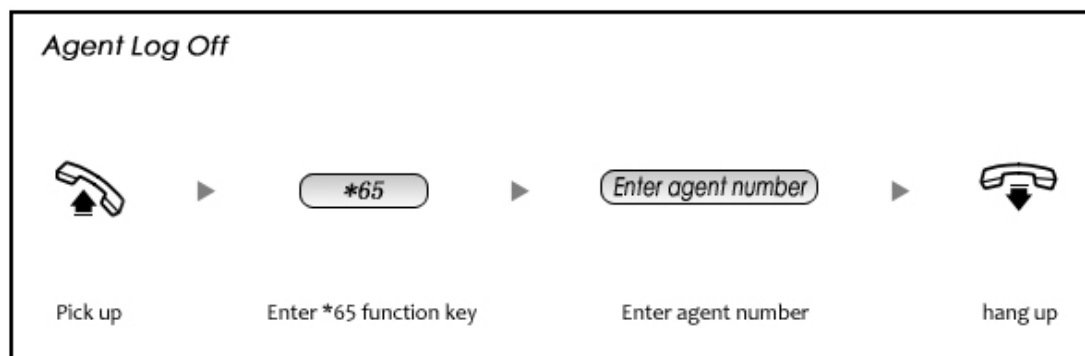

Chapter 4 Advanced

4.1 Options

Options Include local extension settings and new extension default settings.

Click **【Option】** to display the diagram as below:

Item	Explanation
Local Extensions	Set up the digit of local extensions
Operator Extension	Set up Operator Extension.
Global Ring Time Set(s)	Set Ring Time for each extension.
Enable Transfer	Enable transfer feature key.
Enable Music On Ringback	Enable music on ringback.
Allow multiple extensions to be assigned to one analog phone	Allow multiple extensions to be assigned to one analog phone.
Allow extensions to be Alpha Numeric (SIP/IAX users)	If extension is Alpha, outside line can't call in, but extension can call out.
VoiceMail	This user will have a voicemail account after choosing this option.
NAT	Check this option if the User or Phone is located behind a NAT (Network Address Translation) enabled gateway.
SIP	Check this option if the User or Phone is using SIP or is a SIP device.
IAX2	Check this option if the User or Phone is using IAX2

	or is an IAX2 device.
Call Waiting	Check this option if the User or Phone should have Call-Waiting capability.
3-Way Calling	Check this option if the User or Phone should have 3-Way Calling capability.
VM Password	Voicemail Password for this user, eg: "1234".
Delete VMail	Voicemail will not be checkable by phone if you chose this option. Messages will be sent by e-mail only. Note:you must configure SMTP server for this functionality.

4.2 VoiceMail

Details configuration on VoiceMail: VoiceMail Reference/ Voice Message Options/ Playback Options. If you need send message by mail to your defined mailbox, you must configure SMTP and Email model. Click **【Voicemail】** to display the diagram as below:

VoiceMail

	General	SMTP Settings	Email Settings
VoiceMail Reference			
Extension for checking messages:	600		
Max greeting(seconds):	60		
Direct to Voicemail:	<input type="checkbox"/>		
Dial '0' for Operator:	<input type="checkbox"/>		
Voice Message Options			
Message Format:	WAV (16-bit)		
Maximum messages:	100		
Max message time(minutes):	5		
Min message time(seconds):	No minimum		
Playback Options			
	<input checked="" type="checkbox"/> Say message Caller-ID		
	<input type="checkbox"/> Say message duration		
	<input type="checkbox"/> Play envelope		
	<input type="checkbox"/> Allow users to review		
<div> <div>Save</div> <div>Cancel</div> </div>			

Item	Explanation
Extension for checking	The number that users call in order to access their

messages	voicemail accounts, the default number is "600".
Max greeting(seconds)	Defining this option to set a maximum time for the greeting message.
Direct to Voicemail	Defining this option to go to voicemail box directly.
Dial "0" for Operator	Callers entering the voicemail application can leave for Operator by dialing "0".
Message Format	Choose the format of the voicemail messages in this selection box.
Maximum Messages	Choose the maximum number of messages in this selection box.
Maximum message time (min)	Choose the maximum duration of a voicemail message. Message recording will be stopped when it's timeout.
Minimum message time (s)	Choose the minimum duration of a voicemail message in this selection box. Message time below this threshold will be deleted automatically.
Say message Caller-ID	Choose this option to play Caller's ID before voicemail message is played.
Say message duration	Choose this option to play the duration of message before the voicemail message is played.
Play envelope	Choose this option to play envelop (including date, time and caller ID).
Allow users to review	Choosing this option, the caller leaving the voicemail can review their recorded message before it's submitted.

SMTP Settings:

Voicemail

General	SMTP Settings	Email Settings
SMTP Settings:		
<div> SMTP server: <input type="text"/> </div> <div> Port: <input type="text" value="25"/> </div> <div> SSL/TSL: <input type="checkbox"/> </div> <div> <input type="checkbox"/> Enable SMTP Authentication </div> <div> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </div>		

Item	Explanation
SMTP server	In order to send e-mail notifications of your voicemail. Set the IP address or domain name of a SMTP server that your IP PBX may connect to. eg: mail.yourcompany.com
Port	The port number which the SMTP server running is

	generally port 25. If SSL is encrypted, please use port 465 instead.
SSL/TSL	Enable use SSL/TLS to send secure messages to server.
Enable SMTP Authentication	If your SMTP server needs Authentication, please enable SMTP Authentication, and configure the following information.
Username	Input username of your email box.
Password	Input password of your email box.

Email Settings

VoiceMail

General	SMTP Settings	Email Settings
Template for Voicemail Emails		
<div style="margin-bottom: 10px;"> <input checked="" type="checkbox"/> Attach recordings to e-mail </div> <div style="margin-bottom: 10px;"> Sender Name IPPBX Server </div> <div style="margin-bottom: 10px;"> From username@mailserver.com </div> <div style="margin-bottom: 10px;"> Subject you've a voicemail from \${VM_CALLERID} </div> <div style="margin-bottom: 10px;"> Message <div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;"> Dear \${VM_NAME}, you have a new voicemail from \${VM_CALLERID}, the message time is \${VM_DUR}. </div> </div> <div style="text-align: center; margin-top: 10px;"> Save Cancel </div> <div style="margin-top: 20px;"> <p>Template Variables:</p> <ul style="list-style-type: none"> <code>\${VM_NAME}</code> : Recipient's firstname and lastname <code>\${VM_DUR}</code> : The duration of the voicemail message <code>\${VM_MAILBOX}</code> : The recipient's extension <code>\${VM_CALLERID}</code> : The caller id of the person who left the message <code>\${VM_MSGNUM}</code> : The message number in your mailbox <code>\${VM_DATE}</code> : The date and time the message was left </div>		

Item	Explanation
Attach recordings to e-mail	This option defines whether or not voicemails are sent to the Users' e-mail addresses as attachments.
Sender Name	Display the Sender name when you receive a voicemail.
From	Sender's email address
Subject	Subject of the mail
Message	The message pattern

4.3 Music Settings

Management for music on hold, music on ringback, music on call queue.

Click **【Music Settings】** to display the diagram as below:

Music Settings:

Music Settings

Music Settings	Music Management
Music On Hold Reference	
Music: Music 1 ▼	
Music On Ringback Reference	
Music: Music 2 ▼	
Music On Call Queue Reference	
Music: Music 3 ▼	
Save Cancel Music Reload	

Please define different music file for different music folders.

Music Management:

Music Management

Music Settings	Music Management
Music Management	
Directory: Music 1 ▼ Load Files: ▼ Delete	
Upload Music File	
Enter The Music File Name: <input type="text"/> (*.gsm) Note: Please use .gsm format voice file. TFTP Server IP address: <input type="text"/> Select Music Directory: Music 1 ▼	
Upload Music Reload	

Item	Explanation
Directory	Load music in the music file.

Files	Display music in the music file, or you can delete it.
Enter The Music File Name	Input music file name which you want to upload.(GSM format)
TFTP Server IP address	Please enter your TFTP server IP address.
Select Music Directory	Select directory where the uploaded music file will be saved.

4.4 DISA

A trunk call into the PBX, and call to another trunk through outbound route of the PBX. Eg: This trunk can make international call, you are out of the office and want to contact with your customer in foreign country, now you can dial DISA number, after PIN authentication, you are connected to your customer, and you can speak to your customer now. Click **【DISA】** --- **【New DISA】** to display the diagram as below:

Item	Explanation
Name	Give this DISA a brief name to help you identify it.
PIN	The user will be prompted for this number
Response Timeout(s)	The maximum amount of time it will wait before hanging up if the user has dialed an incomplete or invalid number. Default is 10 seconds.
Digit Timeout(s)	The maximum amount of time permitted between digits when the user is typing in an extension. Default is 5 seconds.
Extension for this DISA (Optional)	If you want this DISA to be accessible by dialing an extension, you can define an extension number for this DISA.
Select DialPlan	Set the DialPlan that calls will originate from.

4.5 Paging And Intercom

Paging And Intercom is used for calling a paging extension, all terminals which support this function will be picked up automatically and listen, meanwhile, it supports duplex. Click **【Paging And Intercom】** --- **【Add Paging Group】** to display the diagram as below:

Add Paging Group X

Paging Extension:

Description:

← SIP/801 --
SIP/802 -- 802
SIP/803 -- 803
SIP/804 -- 804
SIP/805 --
SIP/806 -- 806
SIP/807 --
SIP/808 --

Paging Group Members **Device List**

Duplex: ☐

Save **Cancel**

Item	Explanation
Paging Extension	The number users will dial to page this group.
Description	Provide a descriptive title for this Page Group.
Paging Group Members	Selected device(s) in this page
Device List	Select Device(s) to Page.
Duplex	Paging is typically one way for announcements only. Checking this will make the paging duplex, allowing all phones in the paging group to be able to talk and be heard by all. This makes it like an "instant conference".

4.6 Monitor

Monitor is used for recording the defined extensions.

Click **【Monitor】** --- **【New Monitor】** to display the diagram as below:

New MonitorX

Extension:

Monitoring Time

Always Monitor: ☐

Start Time: : End Time: :

Start Day: End Day:

Monitor Settings

Inbound Record: ☐ Outbound Record: ☐

Item	Explanation
Extension	Define an extension.
Monitoring Time	Set monitoring time
Inbound Record	Check to record inbound calls
Outbound Record	Check to record outbound calls

4.7 Phone Book

If incoming call was matched with the number in the phone book, the incoming call will display the name of matched number.

Click **【Phone Book】** to display the diagram as below:

Phone Book

Name:

S.No	Name	Number	Options
No Contact defined !!			

- Search Input contact name to search
- Show All Show all contacts

Create ContactX

Name:

Number:

- Name Add contact's name, Alphabetic or numeric only.
- Number Add contact's number, international phone number is supported.

4.8 Feature Codes

Click 【 Feature Codes 】 to display the diagram as below, you can define relevant parameter.

Feature Codes Management

Call Parking

Extension to Dial for Parking Calls:

What extensions to park calls on: (Eg: '701-720')

How many seconds a call can be parked for:

Pickup Call

Pickup Extension:

Pickup Specified Extension:

Transfer

Blind Transfer:

Attended Transfer:

Disconnect Call:

Timeout for answer on attended transfer:

Black List

Blacklist a number:

Remove a number from the blacklist:

Conference

Invite Participant:

Create Conference:

Return to conference with participant:

Return to conference without participant:

Call Queue

Agent Login Extension:

Agent Callback Login Extension:

Agent Logoff Extension:

Pause Queue Member Extension:

Unpause Queue Member Extension:

Item	Explanation
Extension to Dial for Parking Calls	Set Call Parking number.
What extensions to park calls on	What extensions to park calls on, eg: (701-720)
How many seconds a call can be parked for	Set the call time by second, if it's time out, system will call the previous extension again.
Pickup Extension	Set Pickup Extension.
Pickup Specified Extension	Set Pickup Specified Extension, default: dial *7+extension to pickup the extension.
Blind Transfer	Allow unattended or blind transfers. It works like this: While

	on a conversation with A, you dial the blind transfer key sequence. The system says "Transfer" then gives you a dial tone, while A is on hold. You dial the transferee number(B's number) and A is put through to B immediately. Your line is off. The caller ID displayed to B is exactly the same as the caller ID presented to you.
Attended Transfer	Allow attended transfer or supervised transfer. It works like this: While on conversation with A, you dial the Attended Transfer key sequence. The system says "Transfer" then gives you a dial tone, while A is on hold. You dial the transferee number(B's number) and talk with B to introduce the call, then you can hang up and A will be connected with the B. In case B does not want to answer the call, he/she simply hangs up and you will be back to your original conversation.
Disconnect Call	Disconnect the current transfer call(for Attended transfer).
Timeout for answer on attended transfer	Set the answer timeout value.
Blacklist a number	Add a black list number.
Remove a number from the black list	Remove a black list number.
Invite Participant	The administrator can invite another person by pressing 0 when he/she is in the conference. When you press 0, you will get a dialtone to enter the number of part A you also would like to invite. After the call has been established and you talk to B, you can press ** to direct him to the conference, or *# to hang up the current call and return to the conference yourself.
Create Conference	While you speak with another party you can press *0, you and the callee are immediately transferred to conference.
Return to conference with participant	The administrator can invite another person by pressing 0 when he/she is in the conference. When you press 0, you will get a dialtone to enter the number of part A you also would like to invite. After the call has been established and you talk to B, you can press ** to direct him to the conference, or *# to hang up the current call and return to the conference yourself.
Return to conference without participant	The administrator can invite another person by pressing 0 when he/she is in the conference. When you press 0, you will get a dialtone to enter the number of part A you also would like to invite. After the call has been established and you talk to B, you can press ** to direct him to the conference, or *# to hang up the current call and return to the conference yourself.
Agent Login Extension	Logs the current caller into the queue as a call agent. Once logged in, the agent can take calls with the phone off-hook;

	each call is preceded by a warning tone. Calls are ended by pressing the "*" key.
Agent Callback Login Extension	Extension to be dialed for the Agents to Login to the Specific Queue. Same as Agent Login Extension, except you do not have to remain on the line.
Agent Logoff Extension	Agent logoff from the queue.
Pause Queue Member Extension	'Pauses' a queue member. so that the member can not receive calls.
Unpause Queue Member Extension	'Unpause' a queue member who is 'paused' previously. so that the member can receive calls again.

Chapter 5 Status

This chapter will introduce you the status of record list, call logs, system info, register status etc.

5.1 Record List

Check the record list of defined extension or conference, you can delete the record list. Click **【Record List】** --- **【Monitor】** and **【Conference】** will be displayed as below:

Monitor List Interface

Monitor

		Monitor	Conference
Extension:	<input type="text"/>	Delete	
Date:	<input type="text" value="Jul"/> <input type="text" value="5"/> <input type="text" value="2011"/> <input type="button" value="Go"/>		
List of Monitoring Files			
S.No	Caller ID	Destination	Date Options

Conference List interface

Conference

		Monitor	Conference	
Date:	<input type="text" value="Jul"/> <input type="text" value="5"/> <input type="text" value="2011"/> <input type="button" value="Go"/>	Delete All		
List of Conference Record Files				
S.No	Conference Room	Date	Options	

5.2 Call Logs

Check call logs of extension by caller ID or callee ID. Click **【Call Logs】** to display the diagram as below:

Call Logs Interface

Call Logs

Start Date:	<input type="text" value="Jul"/> <input type="text" value="5"/> <input type="text" value="2011"/>	Field:	<input type="text" value="Caller ID"/>	<input type="button" value="Filter"/>
End Date:	<input type="text" value="Jul"/> <input type="text" value="5"/> <input type="text" value="2011"/>	<input type="button" value="Download"/> <input type="button" value="Delete"/>		
Call Start	Caller ID	Destination	Duration (sec)	Disposition

**Note:**

Duration in the call logs is not real charged duration, if you need billing, PSTN must support polarity reversal function, meanwhile, you must configure relevance parameters of polarity reversal in trunk configuration for the IP PBX.

5.3 Register Status

Check SIP/ IAX2 User, and SIP/IAX2 Trunk status. Click **【Register Status】** to display the diagram as below:

Register Status

SIP Users Status		IAX2 Users Status		SIP Trunks Status		IAX2 Trunks Status	
SIP Users Status:							
Name/username	Host	Dyn	Nat	ACL	Port	Status	
ChenDu/ChenDu	(Unspecified)	D			0	UNKNOWN	
202	(Unspecified)	D	N		0	UNKNOWN	
201	(Unspecified)	D	N		0	UNKNOWN	
112	(Unspecified)	D	N		0	UNKNOWN	
111	(Unspecified)	D	N		0	UNKNOWN	
830	(Unspecified)	D	N		0	UNKNOWN	
829	(Unspecified)	D	N		0	UNKNOWN	
828	(Unspecified)	D	N		0	UNKNOWN	
827	(Unspecified)	D	N		0	UNKNOWN	
826	(Unspecified)	D	N		0	UNKNOWN	
825	(Unspecified)	D	N		0	UNKNOWN	
824	(Unspecified)	D	N		0	UNKNOWN	
823	(Unspecified)	D	N		0	UNKNOWN	
822	(Unspecified)	D	N		0	UNKNOWN	
821	(Unspecified)	D	N		0	UNKNOWN	
820	(Unspecified)	D	N		0	UNKNOWN	
819	(Unspecified)	D	N		0	UNKNOWN	
818	(Unspecified)	D	N		0	UNKNOWN	
817	(Unspecified)	D	N		0	UNKNOWN	
816	(Unspecified)	D	N		0	UNKNOWN	
815	(Unspecified)	D	N		0	UNKNOWN	
814	(Unspecified)	D	N		0	UNKNOWN	
813	(Unspecified)	D	N		0	UNKNOWN	
812	(Unspecified)	D	N		0	UNKNOWN	

5.4 System Info

Check OS version, firmware version and memory, etc from here.

Click **【System Info】** to display the diagram as below:

ZYCOO

[Activate Changes](#)[Logout](#)

Home

Basic

Extensions

Trunks

Outbound Routes

Inbound Control

Advanced

Status

System

System Info

System Info

Resources

OS Version:
Linux IP PBX 2.6.22.18

Uptime:
12:16:00 up 29 min,
Load Average: 1.06, 1.10, 0.92

Firmware Version:
Zycoo System v3.0

Server Date & TimeZone:
Tue Jul 5 12:16:00 WST 2011 [Refresh](#)
[Synchronize](#)

Hostname:
IPPBX

General: Information about OS, Uptime, Asterisk, Date, Timezone and Hostname

Chapter 6 System

This chapter will introduce you how to configure the system of ZYCOO IP PBX.

6.1 Network And Country

Configure WAN/ LAN IP, and tone zone.

Click **【Network And Country】** to display the diagram as below:

Network & Country

WAN Port Setup

IP Assign:

Hostname:

IP Address:

Subnet Mask:

Gateway:

Primary DNS:

Alternate DNS:

LAN Port Setup

IP Address:

Subnet Mask:

Tone Zone Setting

Country:

- IP Assignment Support Static, DHCP and PPPoE.
- Tone Zone Setting Define the tone zone for home country or place.

6.2 Troubleshooting

You can ping other network device through ZYCOO IP PBX and track network route by command "Traceroute".

Click **【Troubleshooting】** to display the diagram as below:

TroubleShooting

Ping

Traceroute

Ping 192.168.1.1 Packets: 4 Start Stop

```
PING 192.168.1.1 (127.0.0.1): 56 data bytes
64 bytes from 127.0.0.1: icmp_seq=0 ttl=64 time=1.5 ms
64 bytes from 127.0.0.1: icmp_seq=1 ttl=64 time=0.5 ms
64 bytes from 127.0.0.1: icmp_seq=2 ttl=64 time=0.5 ms
64 bytes from 127.0.0.1: icmp_seq=3 ttl=64 time=0.5 ms

--- 192.168.1.1 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.5/0.7/1.5 ms
```

6.3 DDNS & VPN

After configure DDNS, you can visit by domain remotely.

Click **【DDNS & VPN】** to display the diagram as below:

DDNS Settings:

DDNS Settings

DDNS Settings

VPN Settings

Dyndns.org DDNS

DDNS Enable: ☐

Username:

Password:

Domain:

Save

VPN Settings:

VPN Settings

DDNS Settings

VPN Settings

N2N VPN

VPN Enable: ☐

Server Address:

Port:

Local IP:

Username:

Password:

SaveCancel

**Note:**

- 1) DDNS supports the domain provided by DynDNS.org only.
- 2) VPN supports N2N only.

6.4 Time Settings

Click **【Time Settings】** to display the diagram as below:

Time Settings

Time Settings

☒ NTP
☐ Manual Time Set

NTP Server:

Time Zone:

Time Settings

Time Settings

☐ NTP
☒ Manual Time Set

Year: (YYYY, eg: 2010)

Month: (MM, eg: 05)

Day: (DD, eg: 08)

Hour: (HH, eg: 09)

Minute: (MM, eg: 30)

Synchronize current PC time
Sync

Item	Explanation
NTP Server	Specify the NTP server that you wish to use. You may type either the domain name or the IP address of the server, and it may be either remote or local. The default server is pool.ntp.org. Be aware that the PBX needs to be able to connect to a NTP server for perfect function.
Time Zone	Select your time zone so that the system will set time based on the time zone.
Synchronize with current PC time	Click the button to synchronize the PBX time with the current PC time.

6.5 Management

Management on username, password, access permit, etc. Click **【Management】** to display the diagram as below:

Management

	Management	Access Permit
Change Password		
Username: <input type="text"/> Password: <input type="text"/> New Username: <input type="text"/> New Password: <input type="text"/> Retype New Password: <input type="text"/> <input type="button" value="Apply"/>		
Set Language		
Set Voice Language: <input type="text" value="中文"/> <input type="button" value="v"/> <input type="button" value="Save"/> (Show Advanced Options)		

- **Change Password** You can change the password of admin here (default password is admin)
- **Set Language** Set voice language of the system. And you can set the SIP & Analog channel here by clicking "Show Advanced Options"

Click **【Management】** --- **【Access Permit】** to display the diagram as below:

Management	Access Permit	
Deny all access GUI except for the ones in the list below <input type="checkbox"/> <input type="button" value="Save"/>		
List of Permitted IP Address		
No Access Permit address defined!!		



Note:

After you added a permitted IP, you can only login the system by this IP, other IP address isn't effective to login the system.

6.6 Data Storage

Upload the voicemail, monitor, conference, call logs, etc to the defined FTP server for storage.

Click **【Data Storage】** to display the diagram as below:

FTP Data Storage

Data Storage	Data Storage Log
FTP Data Storage	
<p>Enable Uploading: <input checked="" type="checkbox"/></p> <p>Server Address: <input type="text" value="192.168.1.93"/></p> <p>User Name: <input type="text" value="gang"/></p> <p>Password: <input type="password" value="•"/></p> <p>Directory: <input type="text" value="1"/></p> <p>Save</p>	
<p>Status: Failed to connect to Ftp Server or upload test file.</p>	

Upload Voicemail,Conference record,Monitor and Call logs to the defined FTP Server automatically when flash storage is over 40%.Then the history files will be removed out automatically.

(Note: NOT upload in working time).

Item	Explanation
Enable Uploading	Enable periodical FTP uploading.
Server Address	Set FTP Server address(IP address or Domain).
User Name	FTP account name.
Password	FTP account password.
Directory	Define a directory on the FTP server.



Note:

- 1) Upload Voicemail, Conference record, Monitor and Call logs to the defined FTP Server automatically when flash storage is over 40%. Then the history files will be removed out automatically.
- 2) NOT upload in working time by default.

6.7 Backup

Backup all the settings. Click **【Backup】** to display the diagram as below:

Backup

List of Configuration Backups			
S.No	Name	Date	Options
1	test	Jun 24, 2011	Restore Delete Download

- **Restore** Restore your selected backup file to system.
- **Delete** Delete your selected backup file.
- **Download** Download your selected backup file to your PC. (Note: Please don't change the backup file name.)

6.8 Update

- Here, you can upload firmware, IVR prompt, backup files to update the system.
- Click **Update** to display the following diagram:

Update

Upgrade System Package
Enter The Package Name: <input type="text" value="uImage-md5"/>
TFTP Server IP address: <input type="text"/>
Restore Default Settings: <input type="checkbox"/>

Update

Upload IVR Prompts
Enter The Sound File Name: <input type="text"/> (*.gsm)
Note: Please use .gsm format voice file.
TFTP Server IP address: <input type="text"/>

Upload


Upload Backup File
Enter The Backup File Name: <input type="text"/>
Note: Don't change the backup file name.
TFTP Server IP address: <input type="text"/>

Upload

Extract the downloaded firmware package which includes one TFTP server and one upgrading file.



Run TFTP server, you will see the following interface:

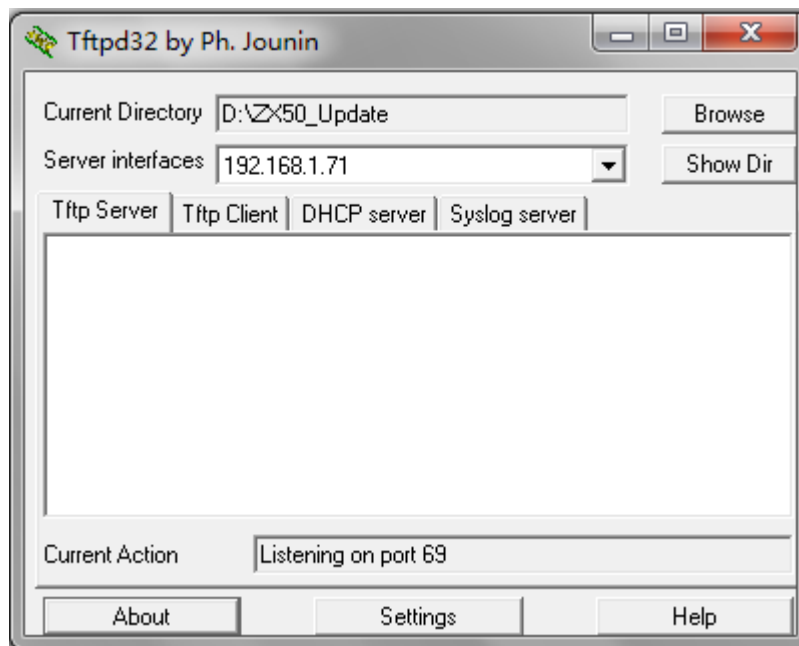

Go into the "update" page, and upload firmware;

Enter the package name `uImage-md5`

Enter **TFTP Server IP address**,

192.168.1.71

Click **Update** button to finish upgrading system package after entering the TFTP Server IP.
Then system will reboot automatically.


Chapter 7 Operating Instruction

This chapter will introduce you how to use ZYCOO IP PBX by example.

7.1 How to connect the ZX50 IP PBX to the Internet


7.1.1 IP PBX behind the Router

If your office access the public network through router, you can put the IP PBX behind the router. You should connect the WAN port of the IP PBX to the LAN ports of the router, and you can also connect HUB or Switch to the LAN port of the IP PBX to enable some PC or IP Phone to access the public network..

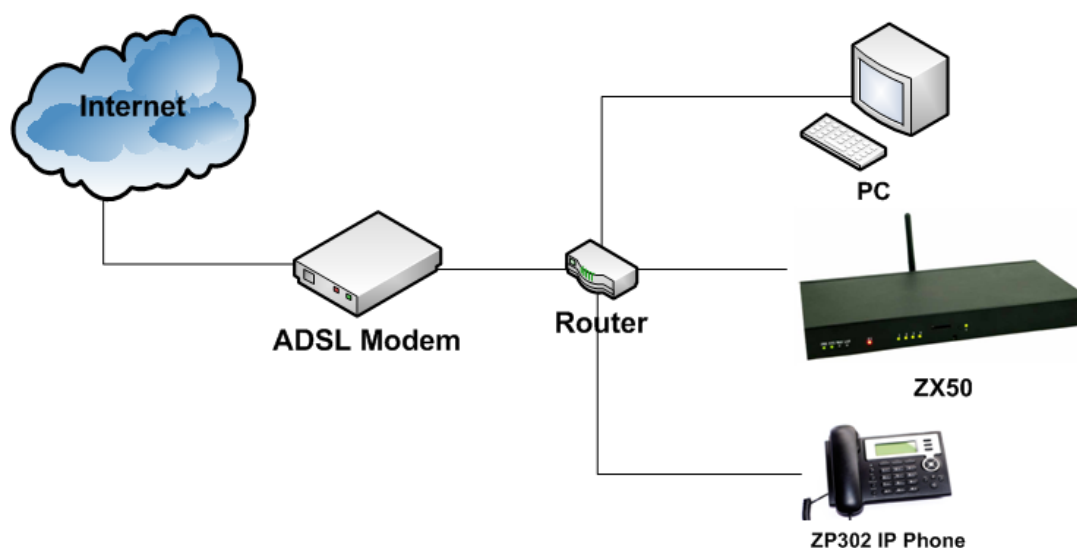

7.1.2 IP PBX behind the Modem


If you have the public IP and want to enable the IP PBX access the public network directly without router, then you should connect the Wan port of the IP PBX to the public network and connect HUB or Switch to the LAN ports of the IP PBX to enable your PC access the public network.(If you want to access the public network through Modem, then you should use the PPPoE function of the IP PBX and make the IP PBX dial-up to connect to the public network)

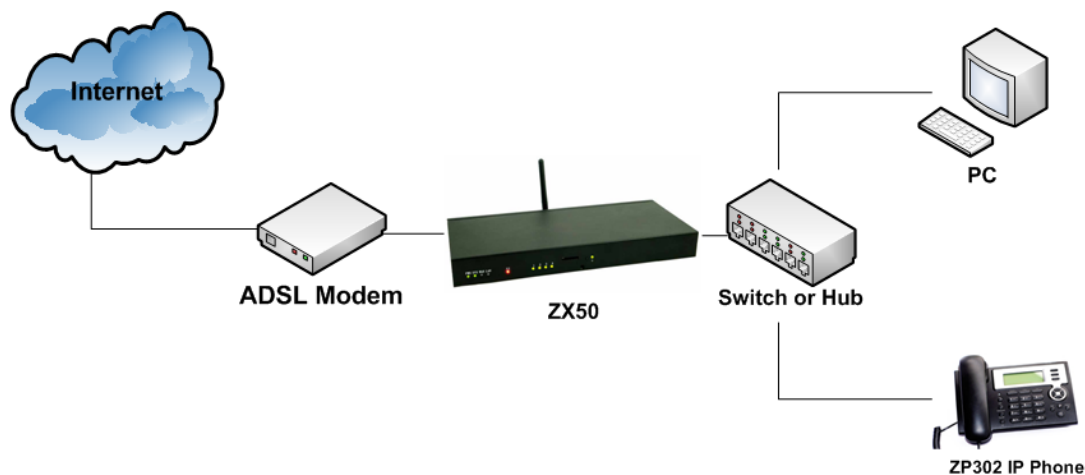

7.2 How to combine two ZX50 IP PBX in the same network

We start combining two IP PBX in the same network and then try to expand to different network.

Below is the structure of how to combine two IP PBX in the same LAN:

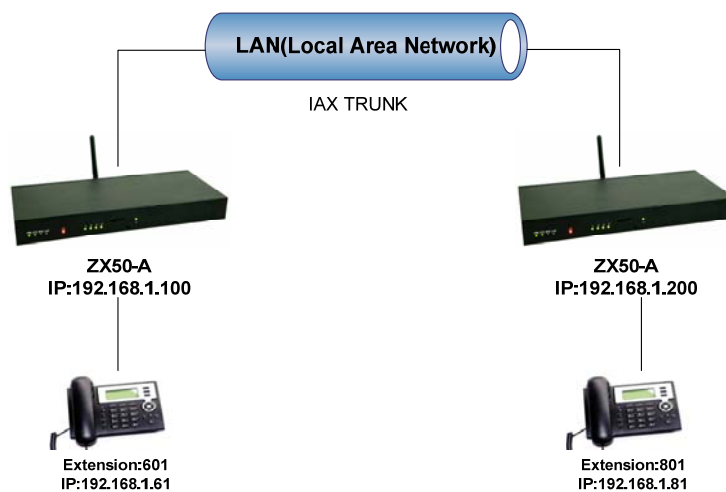

Register the ZX50-A as an peer in ZX50-B(via IAX2 trunk),so the extensions in ZX50-A can make calls to ZX50-B's extensions via this "special" trunk.

In above structure:

1. ZP302A registers to ZX50-A as extension 601.
2. ZP302B registers to ZX50-B as extension 801.
3. All the extensions under ZX50-A are in the format 6XX.
4. All the extensions under ZX50-B are in the format 8XX
5. Extensions under ZX50-A can make calls to extension under ZX50-B with format 8XX.
6. Extensions under ZX50-B can make calls to extension underZX50-A with format 6XX.

Step 1: Set up a peer 699 in ZX50-A

In the page Trunks→ Add a Trunk

Add a Trunk
✕

Provider Type:
☐ Analog/GSM
☐ VoIP Trunk
☒ Peer

Peer Name: ZX50B
 Protocol: SIP
 Dial Plan: default
 Host: dynamic
 NAT: ☐
☐ Without Authentication
 Username: 699
 Password: ●●●

Save
Cancel

Peer Name: ZX50B ;
 Peer Username: 699 Account of this Peer
 Password: 699 IAX2 Log on password
 Advance Options: Select IAX protocol

Step 2: Set up an IAX trunk in ZX50-B to connect to ZX50-A via this ZX50B Peer.
 In the page Trunks--> Add a Trunk

Add a Trunk
✕

Provider Type:
☐ Analog/GSM
☒ VoIP Trunk
☐ Peer

Description: Call_ZX50A
 Protocol: IAX
 Dial Plan: default
 Register: ☒
 Host: 192.168.1.100
 Outboundproxy:
 Proxy Port:
☐ Without Authentication
 Username: 699
 Password: ●●●

Save
Cancel

Step 3: Set Dial Rule in ZX50-B, all calls starting with 6 will be sent to ZX50-A.
 In the page: Outbound Routes --> Add a Dial Rule

X

Rule Name:

Place this call through :

Failover :

PIN Set: ☐

Dialing Rules : If the number begins with and followed by (☒ more than) digits (define a custom pattern)

Delete digits from the front and auto-add digit before dialing

Step 4: Set the user 601 and Dial Plan in ZX50-A.

In the page: Extensions → Dial Plan

Extension Settings:

Extension:	<input type="text" value="601"/>
Name:	<input type="text" value="User2"/>
Password:	<input type="text" value="601"/>
Caller ID:	<input type="text" value="601"/>
Outbound CID:	<input type="text" value=""/>
VM Password:	<input type="text" value="601"/>
E-mail:	<input type="text" value=""/>
Analog Phone:	<input type="text" value="None"/>
Dial Plan:	<input type="text" value="DialPlan1"/>

Activate the change and apply the test:

1. Register an IP phone ZP302B to ZX50-B with 801 extension.
 2. Register an IP phone ZP302A to ZX50-A with 601 extension.
 3. 801 call 601. And you can see 601 will ring and you can pick up the call.
- Above is the way to route ZX50-B's call to ZX50-A,

Accordingly, if you want to call from ZX50-A to ZX50-B, continue as below:

Step 5: Set Dial Rule in ZX50-A all calls starting with 8 will be sent to ZX50-B.

X

Rule Name:

Place this call through :

Failover :

PIN Set: ☐

Dialing Rules : If the number begins with and followed by (☒ more than) digits (define a custom pattern)

Delete digits from the front and auto-add digit before dialing

Step 6: Set the user 801 and Dial Plan in ZX50-B


Extension Settings:	
Extension:	801
Name:	User1
Password:	801
Caller ID:	801
Outbound CID:	
VM Password:	801
E-mail:	
Analog Phone:	None
Dial Plan:	DialPlan1

Activate the change and apply the test:

601 call 801, and 801 will ring and you can pick up the call.

7.3 How to combine two IPPBX in different network

The general environment for two ZX50 in different locations is: two ZX50 IP PBX are both in the Internet and using the public IP.

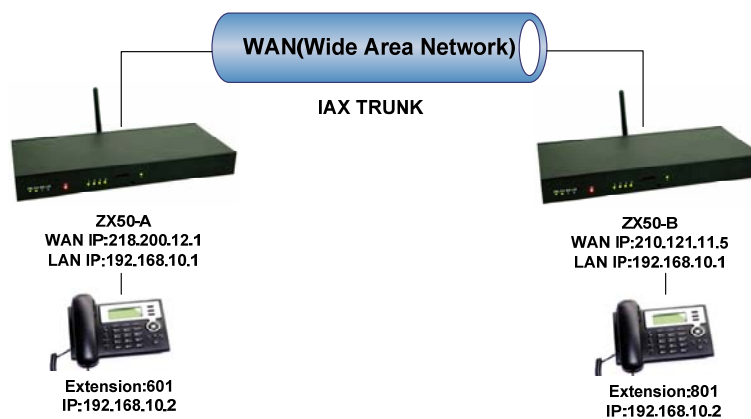

The configuration is same as above guide(7.2 **Combine two ZX50 IP PBX in the same network**) , but use the public IP address as the "HOST" settings, set as below:

In the page Trunks of ZX50-B--> Add a Trunk

Add a Trunk

X

Provider Type:

☐ Analog/GSM

☒ VoIP Trunk

☐ Peer

Description:

Protocol:

Dial Plan:

Register: ☒

Host:

Outboundproxy:


Proxy Port:

☐ Without Authentication

Username:

Password:

The general environment for two ZPX50 IP PBX in different location and one or both two are behind router and using the private IP. So we need to make port forwarding in the router and make ZX50 IP PBX reach to each other.

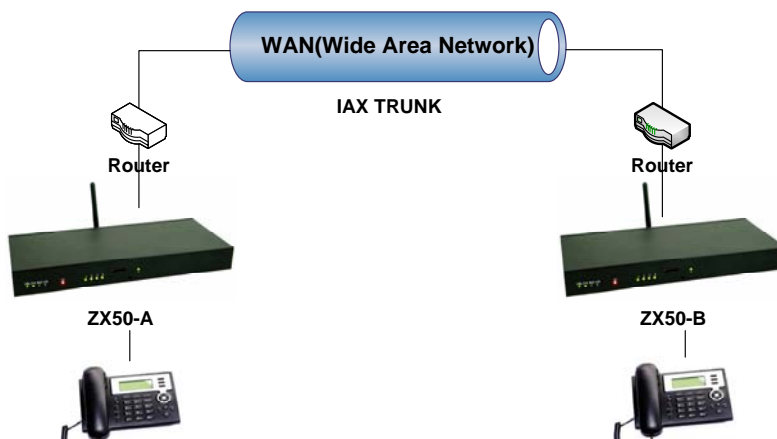

Step 1: Set port forwarding in the router for ZX50-A

For the ZX50-A is behind the router, you need forward the IAX2 port in your router, so all the packets received on the router WAN port (210.11.25.127:4569) will be forwarded to the ZX50-A (192.168.1.21:4569). Below is the setting page in a linksys router:

Applications & Gaming

Setup | Security | **Applications & Gaming** | Administration | Status

Port Range Forwarding | Port Triggering | **UPnP Forwarding** | DMZ

UPnP Forwarding

Application	Ext.Port	TCP	UDP	Int.Port	IP Address	Enabled
FTP	21	<input checked="" type="radio"/>	<input type="radio"/>	21	192.168.1.0	<input type="checkbox"/>
Telnet	23	<input checked="" type="radio"/>	<input type="radio"/>	23	192.168.1.0	<input type="checkbox"/>
SMTP	25	<input checked="" type="radio"/>	<input type="radio"/>	25	192.168.1.0	<input type="checkbox"/>
DNS	53	<input type="radio"/>	<input checked="" type="radio"/>	53	192.168.1.0	<input type="checkbox"/>
TFTP	69	<input type="radio"/>	<input checked="" type="radio"/>	69	192.168.1.0	<input type="checkbox"/>
finger	79	<input checked="" type="radio"/>	<input type="radio"/>	79	192.168.1.0	<input type="checkbox"/>
HTTP	80	<input checked="" type="radio"/>	<input type="radio"/>	80	192.168.1.199	<input checked="" type="checkbox"/>
POP3	110	<input checked="" type="radio"/>	<input type="radio"/>	110	192.168.1.0	<input type="checkbox"/>
NNTP	119	<input checked="" type="radio"/>	<input type="radio"/>	119	192.168.1.0	<input type="checkbox"/>
SNMP	161	<input type="radio"/>	<input checked="" type="radio"/>	161	192.168.1.0	<input type="checkbox"/>
ssh	2020	<input checked="" type="radio"/>	<input type="radio"/>	22	192.168.1.235	<input checked="" type="checkbox"/>
http1	8080	<input checked="" type="radio"/>	<input type="radio"/>	80	192.168.1.29	<input checked="" type="checkbox"/>
http2	8090	<input checked="" type="radio"/>	<input type="radio"/>	80	192.168.1.209	<input checked="" type="checkbox"/>
IAX	4569	<input checked="" type="radio"/>	<input type="radio"/>	4569	192.168.1.21	<input checked="" type="checkbox"/>
IAX2	4569	<input type="radio"/>	<input checked="" type="radio"/>	4569	192.168.1.21	<input checked="" type="checkbox"/>

UPnP Forwarding

UPnP Forwarding can be used to set up public services on your network. When users from the Internet make certain requests on your network, the Router can forward those requests to computers equipped to handle the requests. If, for example, you set the port number 80 (HTTP) to be forwarded to IP Address 192.168.1.2, then all HTTP requests from outside users will be forwarded to 192.168.1.2. It is recommended that the computer use static IP address.

You may use this function to establish a Web server or FTP server via an IP Gateway. In this format, Windows XP can be used to configure this through UPnP communication. Be sure that you enter a valid IP Address. (You may need to establish a static IP address with your ISP in order to properly run an Internet service. For added security,

[More...](#)

Step 2: Set up the Provider Host in ZX50-B

Set up the service provider and calling rule in ZX50-B to make it register to ZX50-A. This method is almost the same as above, EXCEPT you need to use the 210.11.25.127 as the service provider instead of 192.168.1.21.

Step 3: Set port forwarding in the router for ZX50-B

Use the same method as Step 1 to do port forwarding in router-B for ZX50-B as above.

Setp4: Combine two ZX50 and make calls


Accordingly, set the 601 users in ZX50-A and 801 users in ZX50-B, and build the correct dial rules as above, you can make calls between two the ZX50 IP PBX.

Note: You can also apply a DDNS to get one fixed domain for both ZX50 IP PBX and connect to each other rather than using the Port Forwarding in the router.

7.4 How to resolve problems about hearing on one side only

If your IP PBX is behind the Router, you should build an IP Address Map to resolve this problem as below:

Management---->Show Advanced Options ----> Global SIP Settings



--->NAT Support

NAT Support	
External ip:	<input type="text"/>
External Host:	<input type="text"/>
External Refresh:	<input type="text"/>
Local Network Address:	<input type="text"/>
NAT mode:	<input type="button" value="v"/>
Allow RTP Reinvite:	<input type="button" value="v"/>


- [External IP](#) Replace your external IP address as your public IP or domain
- [External Host](#) Replace your external IP address as your public IP or domain
- [External Refresh](#) Set time for refresh, default is 10
- [Local Network Address](#) Replace your local network address and mask
- [NAT mode](#) If your IP PBX is behind the Router, set default as yes

Chapter8 How to use Skype account in ZX50

Notice: The fee of your business account must be more than €50 when you use the account first time.


1. Sign in with the business account on this page:

https://login.skype.com/account/login-form?intcmp=sign-in&return_url=https://secure.skype.com/account/login

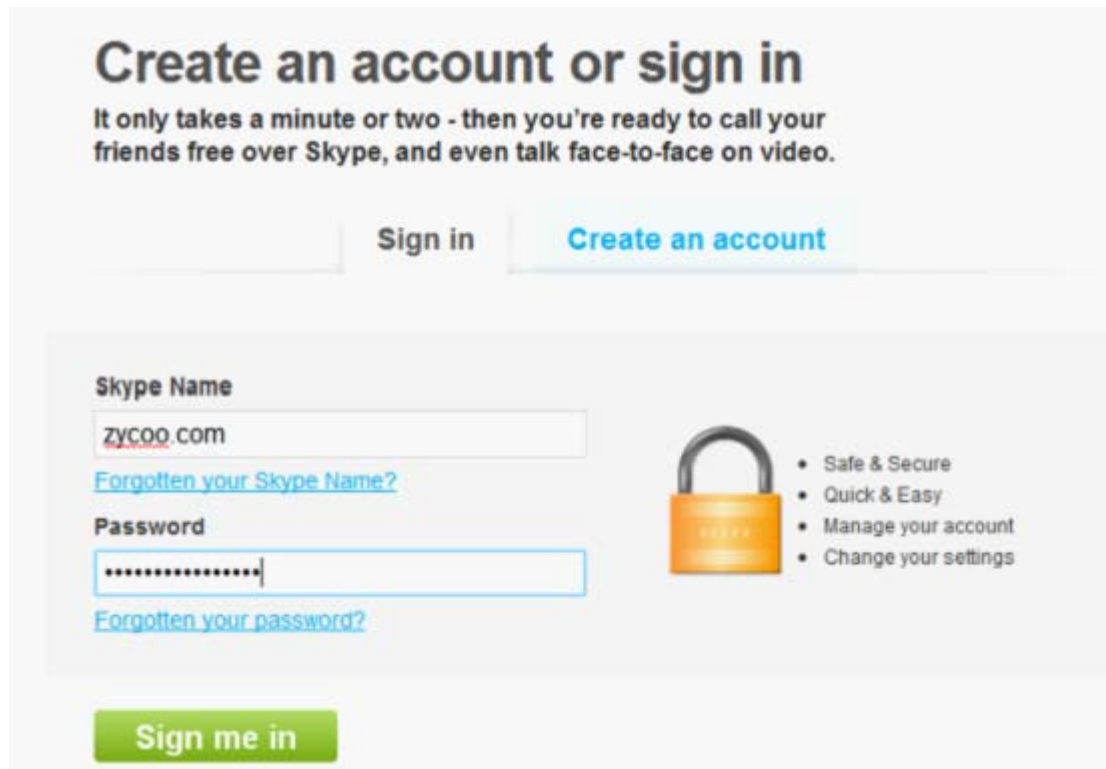

The image shows the Skype login and sign-up page. At the top, it says "Create an account or sign in" and "It only takes a minute or two - then you're ready to call your friends free over Skype, and even talk face-to-face on video." Below this are two buttons: "Sign in" and "Create an account". The "Sign in" button is highlighted. Below the buttons are two input fields: "Skype Name" and "Password". The "Skype Name" field contains "zycoo.com" and has a link "Forgotten your Skype Name?". The "Password" field is empty and has a link "Forgotten your password?". To the right of the input fields is a padlock icon and a list of benefits: "Safe & Secure", "Quick & Easy", "Manage your account", and "Change your settings". At the bottom is a green button labeled "Sign me in".


2. When you have signed in, please click **Skype Manager** at the end of this page.

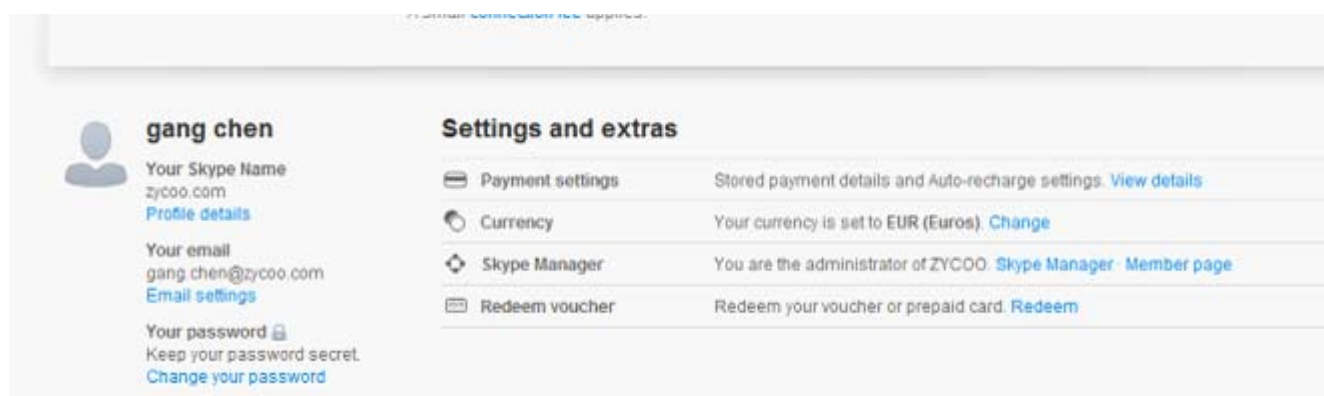

The image shows the Skype account settings page. On the left, there is a profile section for "gang chen" with a profile picture icon. It lists "Your Skype Name" as "zycoo.com" with a link "Profile details", "Your email" as "gang.chen@zycoo.com" with a link "Email settings", and "Your password" with a lock icon and a link "Change your password". On the right, there is a "Settings and extras" section with a table of settings:

Settings and extras	
Payment settings	Stored payment details and Auto-recharge settings. View details
Currency	Your currency is set to EUR (Euros). Change
Skype Manager	You are the administrator of ZYCOO. Skype Manager Member page
Redeem voucher	Redeem your voucher or prepaid card. Redeem


3. Please click the button **Features**.

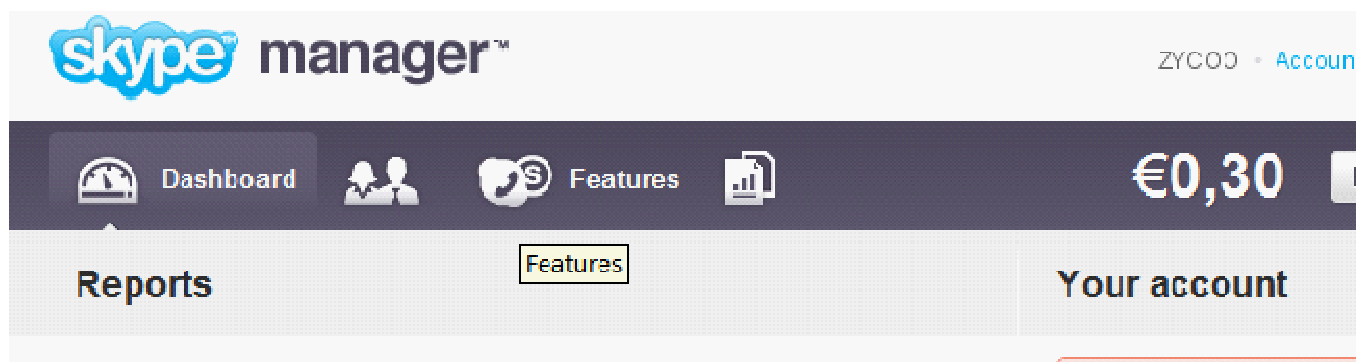

4. Please click the **Skype connect**




5. Create a SIP profile

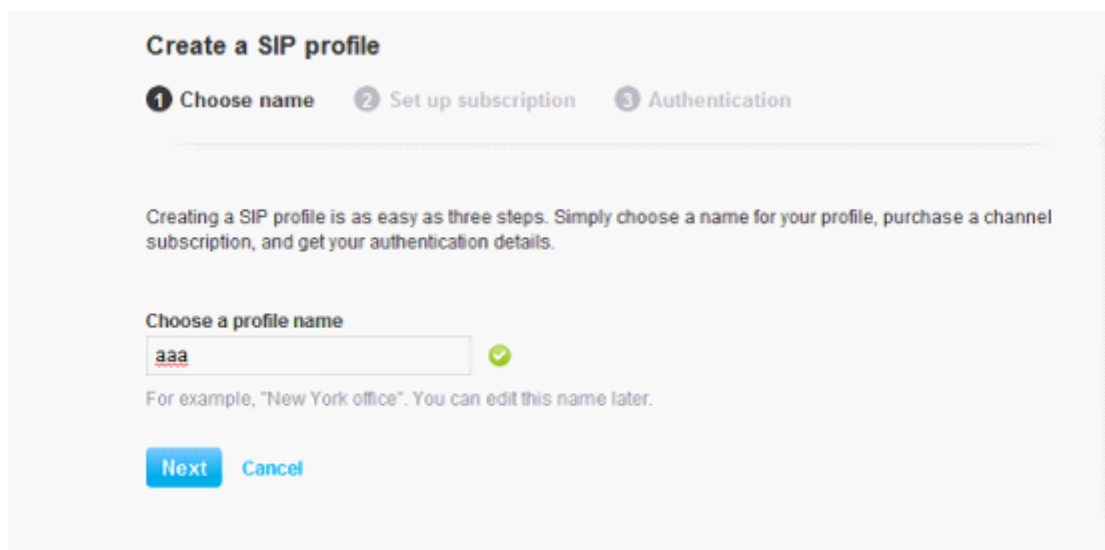

Then you can create one sip account, you need pay for € 4.95 for one channel as monthly rent and you need input the register information to our VoIP trunk blank, then you can register to skype server. And you need assign money for outgoing calls, then you can call out.

Note: Skype Channel belongs to VoIP channel, so any calls from Skype will be directed to the same destination of VoIP.

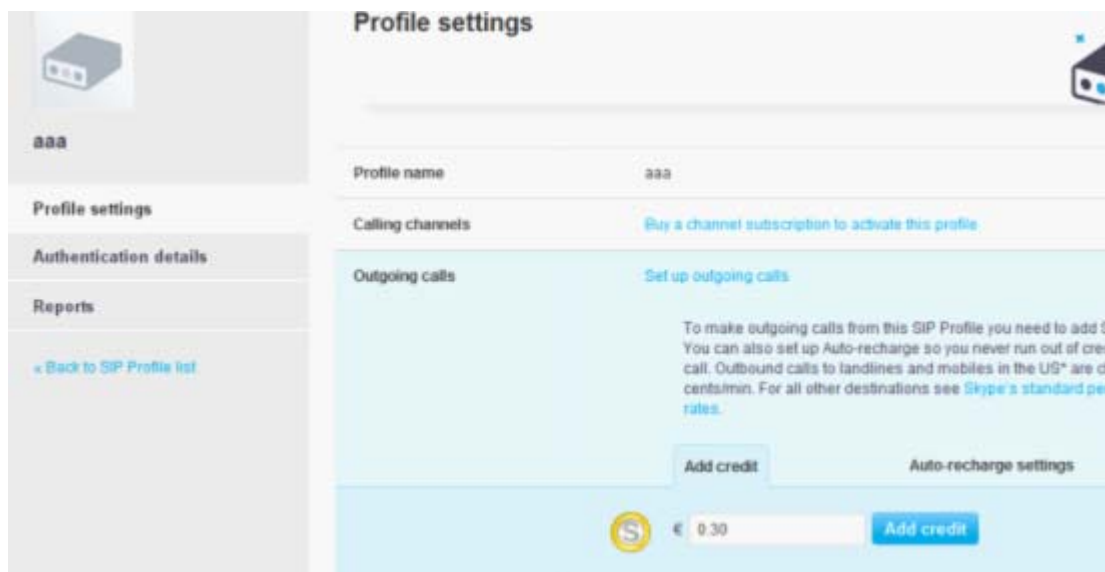

Then you can see the sip account information by clicking **Authentications details**.

